




# Torque King Electric RTR RC Monster Truck Wheel Replacement

This will serve as a wheel replacement guide.

Written By: Erik Rudberg

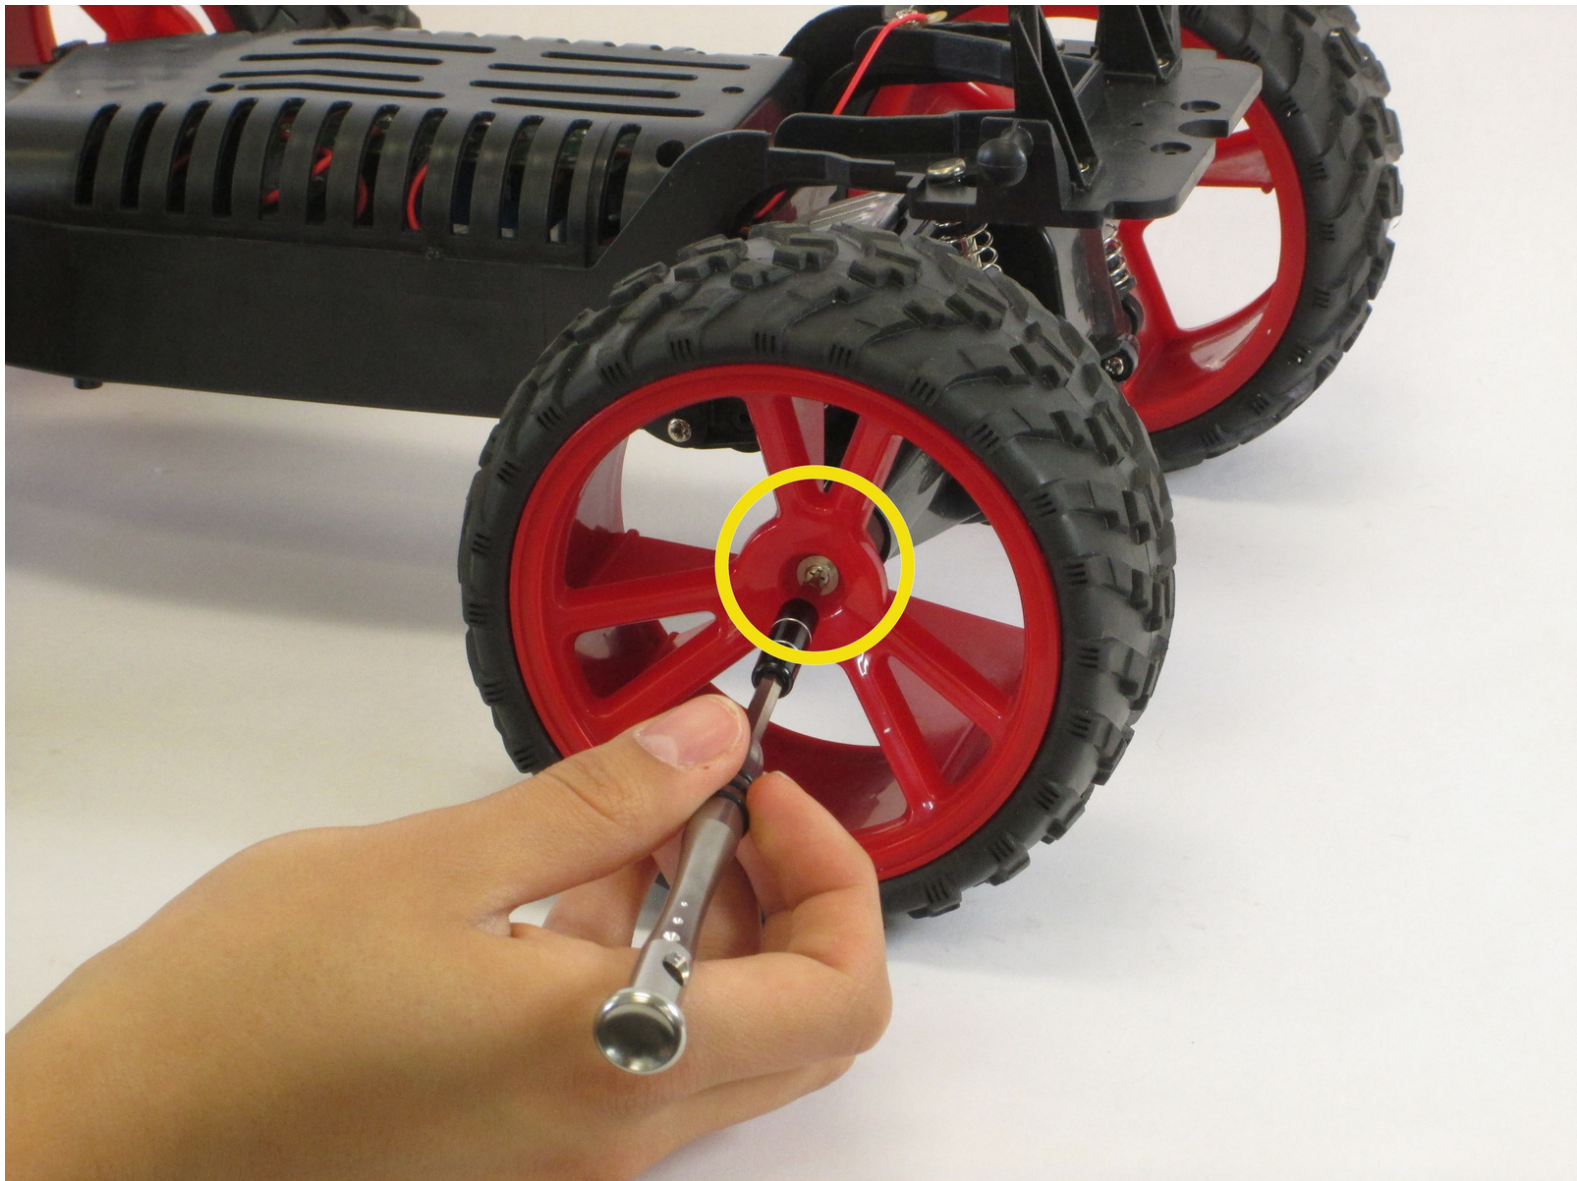

## INTRODUCTION

Check to see if anything is obstructing the wheel before referring to this guide.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Casing



- From the top view, remove each of the four pins that hold the casing in place.


## Step 2



- Slowly pull the casing up to remove it.




### Step 3 — Removing Screws

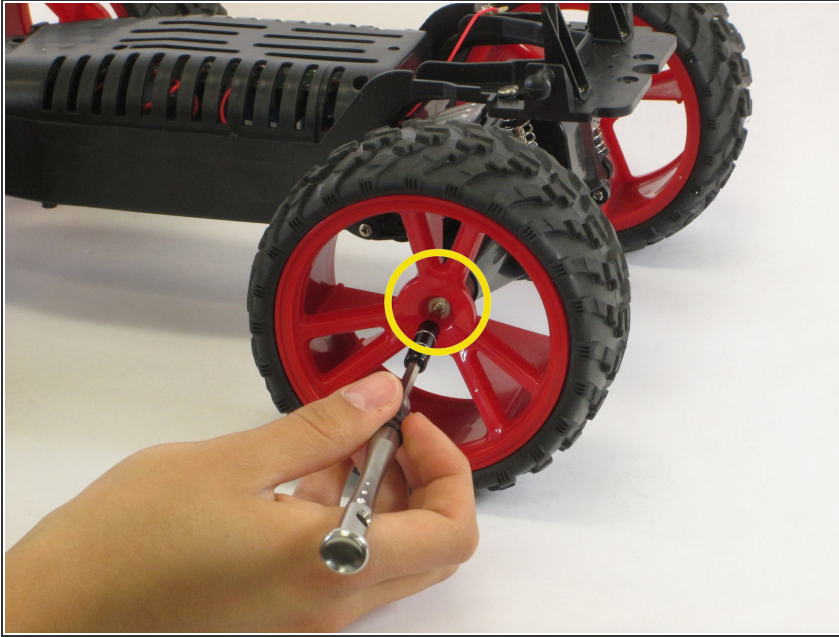

- Using a Phillips 1 screwdriver, completely unscrew the 8mm screw located in the center of the wheel. Repeat this step for other wheels if needed.

### Step 4 — Removing the Wheel

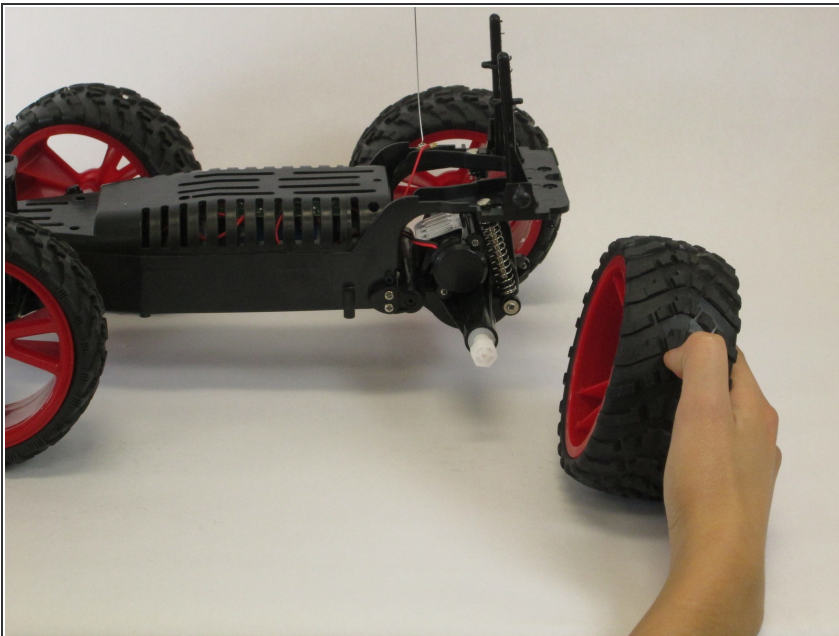

- Carefully pull the wheel off of its axle. Repeat for other wheels as necessary.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 12:40:06 AM.